



Instructions

To extend utensils for use, pull apart slowly till round knob slips into cavity.

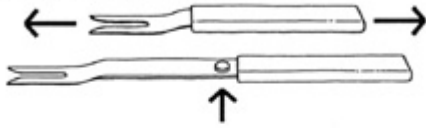

To extract utensil from handle for cleaning, push knob down and pull apart.

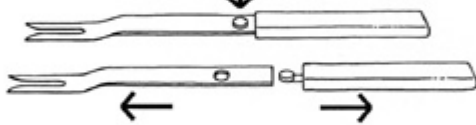

NOTE: Utensils and handles are both dishwasher safe.

To retract for storage, push knob down and push utensil into handle.

